

	Intermittency	Description	Diagnose	Actions
ERROR		Central symbol red and SOC leds all Blinking	Error in battery-Bicycle link. Electric assistance doesn't work.	Check (Clean or brush) battery-to-bike plug. Defect in bike wiring.
		Central Symbol blinking red SOC leds fixed	ERROR BICYCLE: Bike control detected a major error in the electric system, motor with problems or defect sensors	Check motor connexion. Check control & sensors. Bike internal problem.
		Central Symbol fixed red , SOC leds blinking	BATTERY ERROR. The BMS detected a major error in the battery.	Cells with problems or excessive discharge. The discharge limit could be exceeded (charge) or temperature limits overridden. Internal Problem in the battery.
WARNING		Central Symbol Blinking SOC fixed at 66%	Lack of battery information but BMS is working without errors. Bike is working but the indication of SOC is not correct. Bike will stop suddenly with empty Battery without further advice.	Defect in battery internal communication between BMS and Display board. Defect display board. Internal Battery problem.
		Low weight SOC Led red blinking	Warning. Some operational limits are approaching. Bike operates. Cycle 1 flash: bike control warning Cycle 2 flashes: Battery warning	Check status of the bike, follow possible repetition.